

# Cottage/Garden Size Weathervane Cupola Installation Instructions




*Watch our Assembly Video at [www.gooddirections.com/installationinstructions](http://www.gooddirections.com/installationinstructions) or scan*




**Your Package Contains the following:**

One Cottage Weathervane Figure Plus...

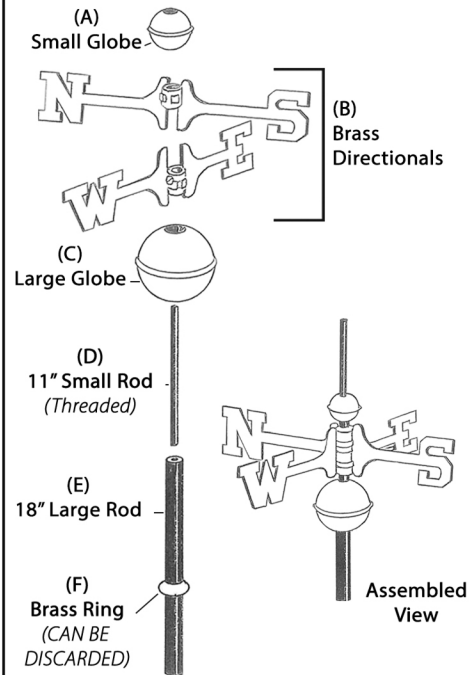


**1**

Thread Small Rod (D) into Large Rod (E), Position wrenches on flat spots, Tighten Firmly.


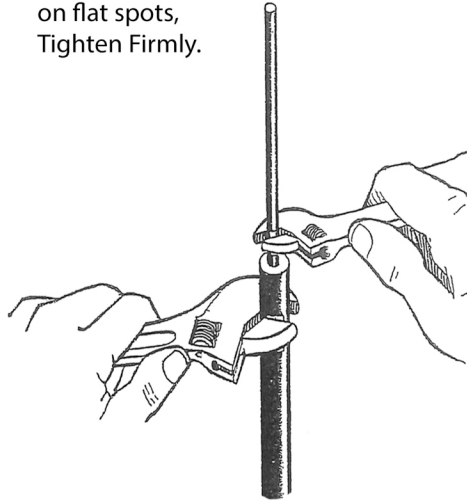


**2**

Slide Large Globe (C) down Small Rod (D). Globe will rest on top of Large Rod (E).

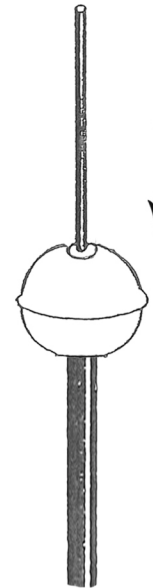


**3**

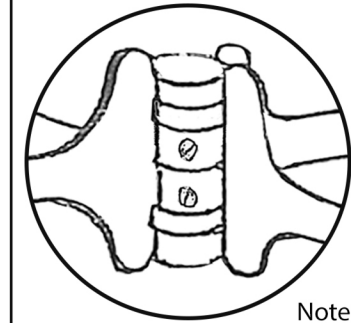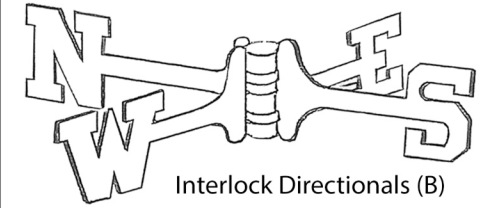

Note: NS+EW position is correct when both screws are aligned.

**4**


Slide Directionals (B) onto rod and tighten set screws. Then, slide Small Globe (A) onto rod. (Note: Smaller hole goes on top, globe fits loose).

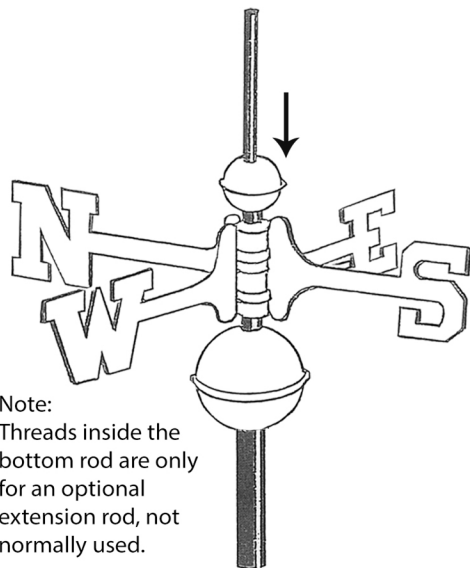

**5**


Slide Weathervane Figure onto Rod (Adding a Retaining Clip if included)

Note: Retaining Clip is supplied only for weathervanes that require them (to prevent windlift). E.G. Heron, duck, or any weathervane with extended wings.

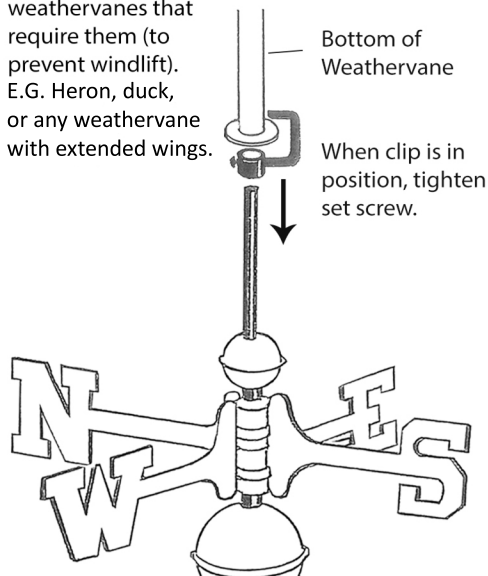

**6**

Slide weathervane rod into cupola roof, and lock into place with internal mounting bracket.

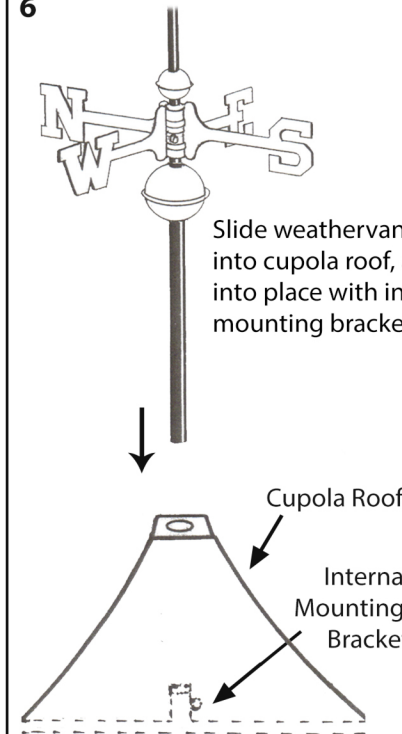

**7**

Good Directions Cupolas are "Weathervane Ready" with internal mounting bracket installed, and a 3/4" hole in the roof.

The weathervane rod is secured in roof section before the final assembly of the cupola.

